



Leaders in Reception Seating

Lesro Industries, Inc.
1 Griffin Road South
Bloomfield, CT
06002

Phone 860.243.3226
Fax 860.243.5392
www.lesro.com

Assembly Instructions For Avon Connecting Center Table

Tools required: Phillips screwdriver, Allen wrench (included in hardware pack).

Note: These instructions are intended for various models and configurations. Your products may not look exactly as those shown in the diagrams.

Important: The assembly process requires that some hardware be kept loose until later in the sequence. Follow these instructions closely to ensure correct assembly.







Recommendation: Retighten all bolts on a seasonal basis to ensure your product remains strong and stable for many years of use.

Weight Capacity: These tables are not intended for use as seats.


Parts List

Tabletop
Connecting Brackets, Front, 2 pcs.
Connecting Brackets, Back, 2 pcs.
5/8" Phillips Screws, 16 pcs.
Allen Wrench

1. Unpack and identify all parts.
2. Assemble chairs individually according to chair instructions before attaching connecting table.
3. Position chairs about 2 feet apart.
4. Use an Allen wrench to loosen the seat cushion bolts about 1/2" on facing sides of both chairs, as shown in figure 1.
5. Attach the front and back brackets to both chairs. With bolt inserted fully into slot, as shown in figure 2, retighten bolts securely.
6. Pull the chairs together and rest the tabletop on the brackets, as shown in figure 3. Sticker on underside of tabletop faces back. (22 1/4" edge goes in front. 23 1/4" edge goes in back.)
7. Attach tabletop to brackets using Phillips screws into pre-drilled holes, as shown in figure 4. Once all 8 screws are started, tighten securely, using care not to strip.
8. With both chairs resting on a level floor, carefully align the back legs so they form a straight line, as shown in figure 5.
9. Insert Phillips screws through brackets into bottom of seat cushions and tighten securely, using care not to strip.
10. Your product is now assembled and ready to use.

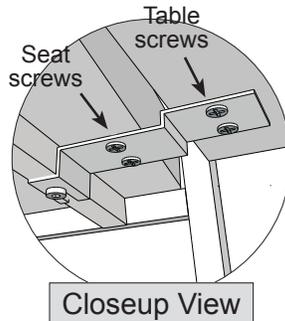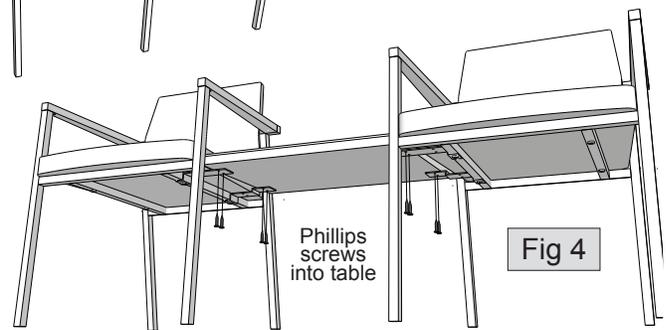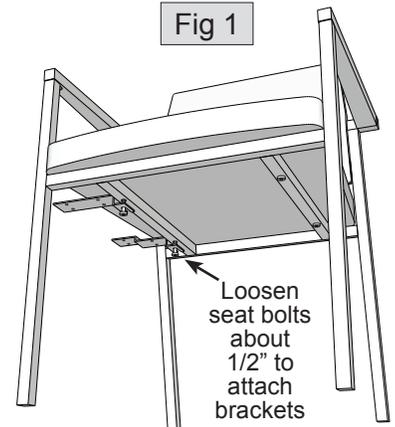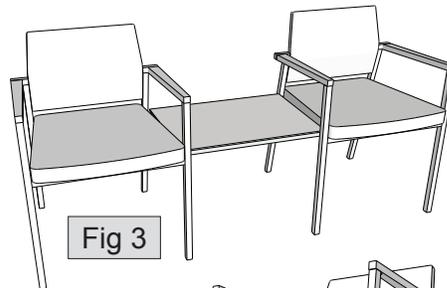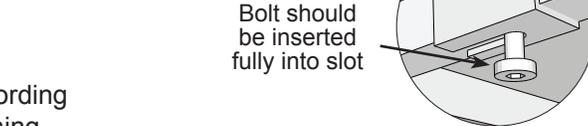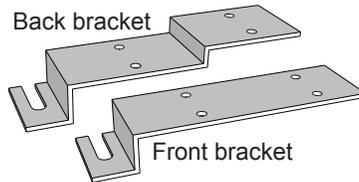

Be sure legs are in a straight line before inserting Phillips screws into bottom of seats.

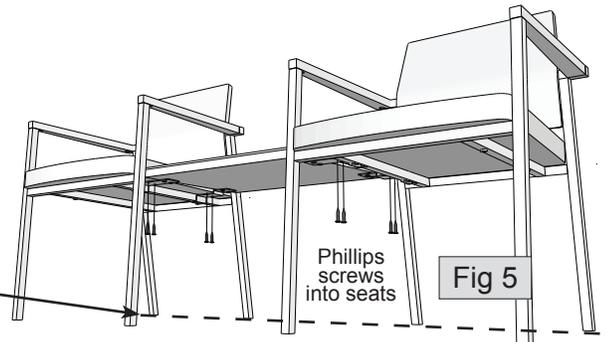

Thank you for purchasing a Lesro product.
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.
Visit us online at www.lesro.com



Leaders in Reception Seating

Lesro Industries, Inc.
1 Griffin Road South
Bloomfield, CT
06002

Phone 860.243.3226
Fax 860.243.5392
www.lesro.com

Assembly Instructions For Avon Connecting Corner Table

Tools required: Phillips screwdriver, Allen wrench (included in hardware pack).

Note: These instructions are intended for various models and configurations. Your products may not look exactly as those shown in the diagrams.

Important: The assembly process requires that some hardware be kept loose until later in the sequence. Follow these instructions closely to ensure correct assembly.

Recommendation: Retighten all bolts on a seasonal basis to ensure your product remains strong and stable for many years of use.

Weight Capacity: These tables are not intended for use as seats.

Parts List

Tabletop
Connecting Brackets, Front, 2 pcs.
Connecting Brackets, Back, 2 pcs.
Table Leg
5/8" Phillips Screws, 18 pcs.
Allen Wrench

1. Unpack and identify all parts.
2. Assemble chairs individually according to chair instructions before attaching connecting table.
3. Position chairs about 2 feet apart.
4. Use an Allen wrench to loosen the seat cushion bolts about 1/2" on facing sides of both chairs, as shown in figure 1.
5. Attach the front and back brackets to both chairs. With bolt inserted fully into slot, as shown in figure 2, retighten bolts securely.
6. Place the tabletop upside down on a soft, clean surface to prevent scratching.
7. Attach table leg to tabletop using Phillips screws into pre-drilled holes, as shown in figure 3. Tighten screws securely using care not to strip.
8. Pull the chairs together and rest the tabletop on the brackets, as shown in figure 4.
9. Attach tabletop to brackets using Phillips screws into pre-drilled holes, as shown in figure 5. Once all 8 screws are started, tighten securely, using care not to strip.
10. After checking that chairs are square to one another, insert Phillips screws through brackets into bottom of seat cushions as shown in figure 6. Tighten securely, using care not to strip.
11. Your connecting corner table is now assembled and ready to use.

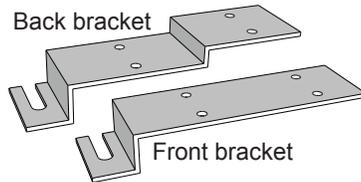


Fig 2

Bolt should be inserted fully into slot

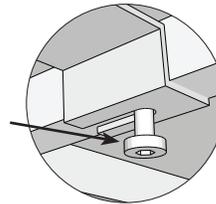


Fig 1

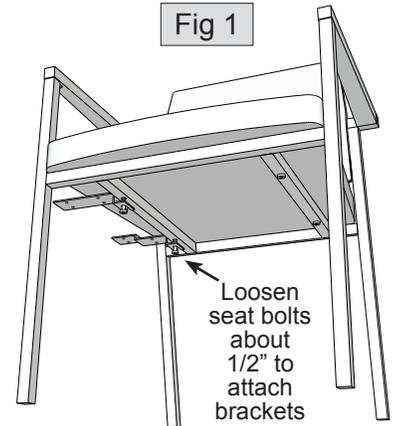


Fig 3

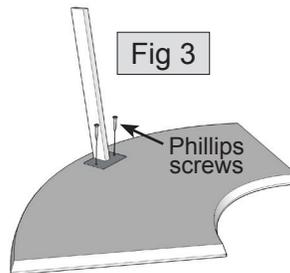


Fig 4




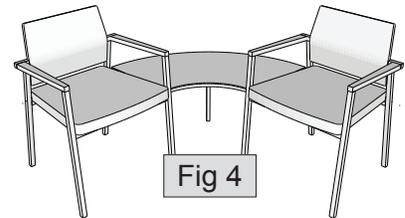


Fig 5

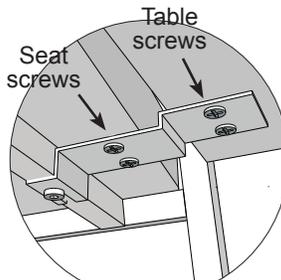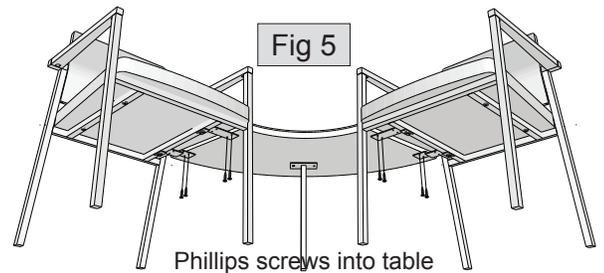

Closeup View

Fig 6

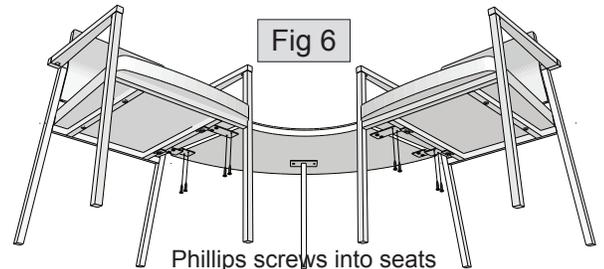

Thank you for purchasing a Lesro product.
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.
Visit us online at www.lesro.com