



Leaders in Reception Seating

Lesro Industries, Inc.  
1 Griffin Road South  
Bloomfield, CT  
06002

Phone 860.243.3226  
Fax 860.243.5392  
www.lesro.com

# Assembly Instructions

## For Avon Guest, Oversize, Cafe Stool and Hip Chairs

**Tools required:** Allen wrench (included in hardware pack)


**Note:** These instructions are intended for various models and configurations. Your products may not look exactly as those shown in the diagrams.

**Recommendation:** Retighten all bolts on a seasonal basis to ensure your product remains strong and stable for many years of use.


**Weight Capacity:** All guest chairs in this series have a weight capacity of **275 lbs.** per seat unless otherwise stated.

1. Unpack and identify all parts.
2. Attach the seat to the chair frame using 4 flat-head Allen bolts into threaded inserts, as shown in figures 1A and 1B. Note that the laminate seat utilizes 4 nylon spacers. Center the seat so that the gaps between the seat and the front leg tubes are equal on both sides. Tighten bolts securely.
3. Position back so that pins in back leg tubes slide into grooves in edges of back, as shown in figure 2. Both upholstered backs and laminate backs have grooves.
4. Attach back to chair frame using 4 taper-head Allen bolts into threaded inserts, as shown in figure 3. Tighten bolts securely.
5. Your chair is now ready to use.




### Upholstered Seat

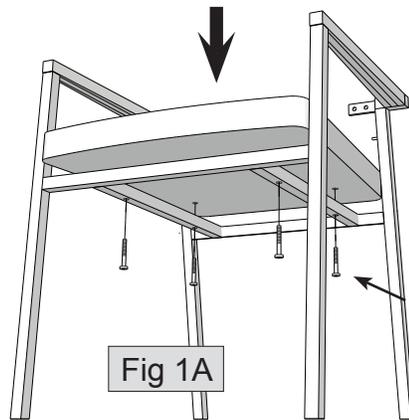

### Laminate Seat

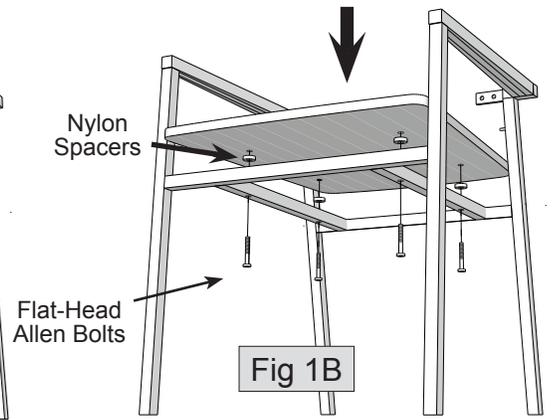

**IMPORTANT:** Nylon Spacers MUST be used under all laminate seats or damage to laminate will occur. Spacers are NOT used for upholstered seats

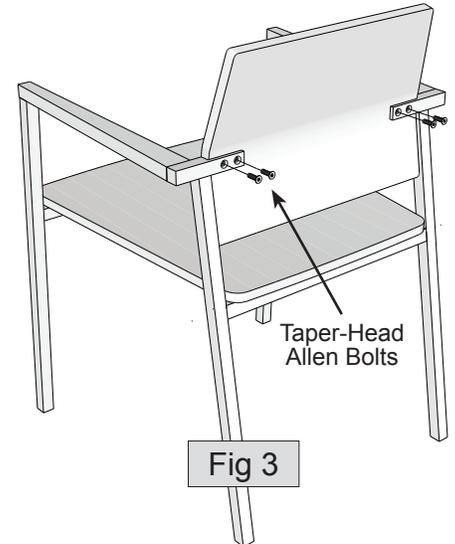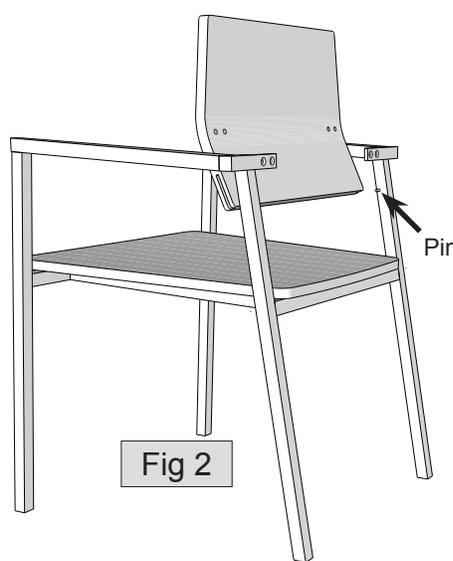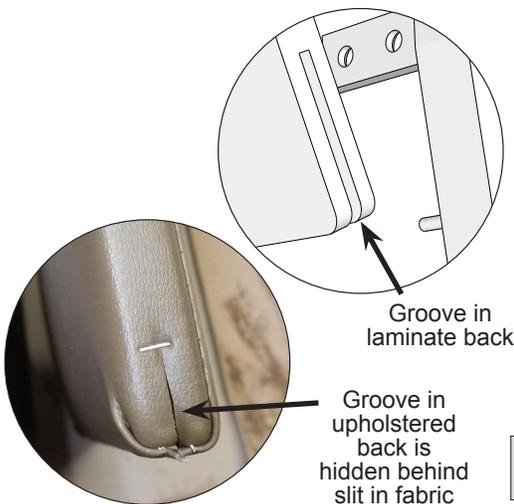

**IMPORTANT!** Steel pins on frame must be inside the back grooves.

Thank you for purchasing a Lesro product.  
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.  
Visit us on-line at [www.lesro.com](http://www.lesro.com)