



Leaders in Reception Seating

Lesro Industries, Inc.
1 Griffin Road South
Bloomfield, CT
06002

Phone
860.243.3226
Fax
860.243.5392
www.lesro.com

Assembly Instructions For Fremont Chairs, Loveseats and Sofas

Tools required: Phillips head screwdriver and 9/16" ratchet or wrench. (Ratchet recommended.)

Note: These instructions are intended for various models and configurations. Your products may not look exactly as those shown in the diagrams.

Important: The assembly process requires that some hardware be kept loose until later in the sequence. Follow these instructions closely to ensure correct assembly.

Recommendation: Retighten all bolts on a seasonal basis to ensure your product remains strong and stable for many years of use.

Weight Capacity: All Fremont guest chairs have a weight capacity of 500 lbs. per seat, bariatric chairs **750 lbs.**, loveseats **600 lbs.**, and sofas **700 lbs.**, unless otherwise stated.

1. Unpack and identify all parts.
2. Lay back on a soft clean surface as shown in figure 1.
3. Attach seat to back using 2" bolts and washers into threaded inserts, as shown in figure 2.
4. Align bottom edge of seat with bottom edge of back.
5. Tighten bolts securely.
6. Insert Phillips screws through pre-drilled holes in plywood, as shown in figure 2. Tighten securely using care not to strip.
7. Your product is now assembled and ready to use.

Section 1 - Chairs, Loveseats and Sofas without Arms

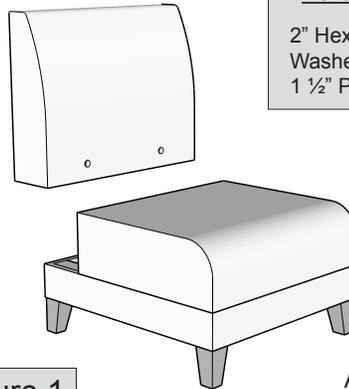


Figure 1

Hardware Pack

- 2" Hex Bolts
- Washers
- 1 1/2" Phillips Screws


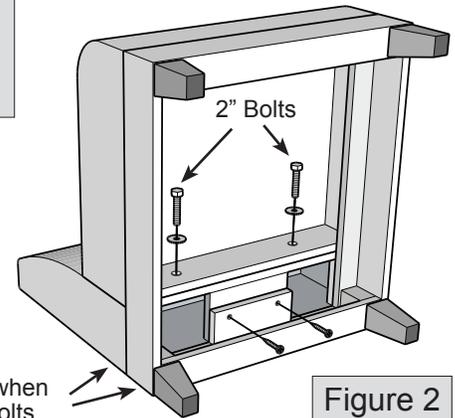


Figure 2

1. Follow instructions in Section 1 to attach seat to back. Be sure bottom edge of seat is aligned properly with bottom edge of back when tightening bolts.
2. Attach arms to seat and back using 3" bolts and washers into threaded inserts, as shown in figure 3. Start each bolt first, until all have caught a few threads, then finger tighten only. **Hint: start with bolt in back cushion first, followed by front seat bolt, then middle bolt last.**
3. Align bottom edges of seat and arms. Also align back edges of arms and back cushion.
4. Tighten all bolts securely.
5. Your product is now assembled and ready to use.

Section 2 - Chairs, Loveseats and Sofas with Arms

Figure 3

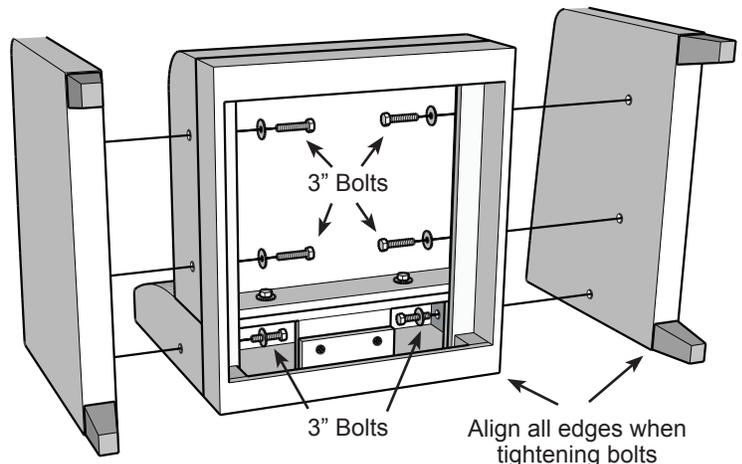

Hardware Pack

- 2" Hex Bolts
- 3" Hex Bolts
- Washers
- 1 1/2" Phillips Screws

Thank you for purchasing a Lesro product.
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.
Visit us on-line at www.lesro.com



Leaders in Reception Seating

Lesro Industries, Inc.
1 Griffin Road South
Bloomfield, CT
06002

Phone
860.243.3226
Fax
860.243.5392
www.lesro.com

Assembly Instructions For Fremont Chairs, Loveseats and Sofas

Tools required: Phillips head screwdriver and 9/16" ratchet or wrench. (Ratchet recommended.)

Note: These instructions are intended for various models and configurations. Your products may not look exactly as those shown in the diagrams.


Important: The assembly process requires that some hardware be kept loose until later in the sequence. Follow these instructions closely to ensure correct assembly.

Recommendation: Retighten all bolts on a seasonal basis to ensure your product remains strong and stable for many years of use.

Weight Capacity: All Fremont guest chairs have a weight capacity of 500 lbs. per seat, bariatric chairs **750 lbs.**, loveseats **600 lbs.**, and sofas **700 lbs.**, unless otherwise stated.

Section 3 - Connecting Chair with Center Arms

Figure 4

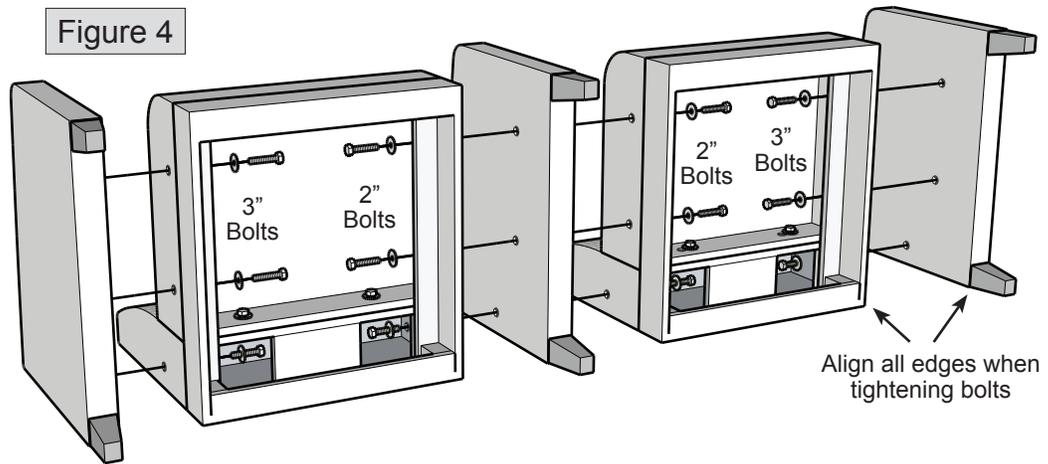

Hardware Pack

2" Hex Bolts
3" Hex Bolts
Washers
1 1/2" Phillips Screws

1. Follow instructions in Section 1 to attach seats to backs using **2" bolts**. Be sure bottom edges of seats are aligned properly with bottom edges of backs when tightening.
2. Identify left, right, and center arm pieces. Center arms have bolt holes on both sides. Left and right arms have bolt holes on one side only.
3. Orient chairs and arms side-by-side, as shown in figures 4 and 5.
4. Attach **outside arms** to seats and backs using **3" bolts** and washers into threaded inserts, as shown in figure 4.
5. Attach **center arms** to seats and backs using **2" bolts** and washers into threaded inserts, as shown in figure 4.
6. Start each bolt first, until all have caught a few threads, then finger tighten only. **Hint: start with bolt in back cushion first, followed by front seat bolt, then middle bolt last.**
7. Align bottom edges of seats and arms. Also align back edges of arms and back cushions.
8. Tighten all bolts securely.
9. Your product is now assembled and ready to use.

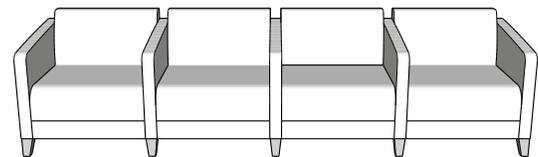
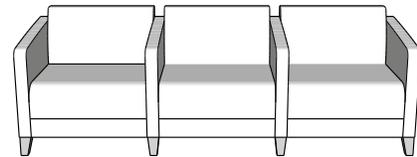
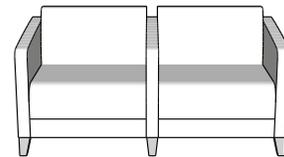


Figure 5

Thank you for purchasing a Lesro product.
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.
Visit us on-line at www.lesro.com