



Leaders in Reception Seating

Lesro Industries, Inc.  
1 Griffin Road South  
Bloomfield, CT  
06002

Phone  
860.243.3226  
Fax  
860.243.5392  
www.lesro.com

# Assembly Instructions

## For Amherst, Ashford, Chelsea, Classic, Contour, Franklin, Hartford, Lenox, Madison, Tempe & Weston

**Tools required:** Phillips screwdriver

**Note:** These instructions are intended for various models and configurations. Your product may not look exactly as shown in the diagrams.

**Important:** Use 2 or more people when moving table and chair assembly from one place to another. Avoid putting excessive strain on connections or damage may occur.


**Recommendation:** Retighten all bolts on a seasonal basis to ensure your product remains strong and stable for many years of use.

**Weight Capacity:** These tables are not intended for use as seats.

### Parts List

Tabletop  
Table Leg & Leg Plate  
Slotted Brackets, 4 pcs.  
3/4" Phillips Screws, 2 pcs.  
3/4" Phillips Bolts, 10 pcs.

## Connecting Corner Tables

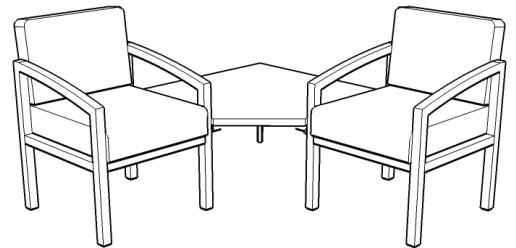

1. Unpack and identify all parts.
2. Assemble chairs individually according to chair instructions. Arms with table bolt inserts must be oriented to face each other when chairs are adjacent.
3. Attach leg plate to table leg using Phillips bolts into threaded inserts, as shown in figure 1. Tighten securely.
4. Place the tabletop upside down on a soft, clean surface to prevent scratches.
5. Attach leg to tabletop using Phillips screws through leg plate into pre-marked holes, as shown in figure 2. Tighten securely using care not to strip.
6. Attach slotted brackets to tabletop using bolts into threaded inserts also as shown in figure 2. Be sure brackets are flush with edge of tabletop. Keep bolts slightly loose for now.
7. Position chairs about 2 feet apart, oriented as shown in top diagram. Arms with bolt inserts must face each other.
8. Insert bolts about halfway into bolt inserts in facing arms, as shown in figure 3 closeup.
9. Set tabletop between chairs, also as shown in figure 3. The slotted brackets slide onto the bolts from step 8.
10. Press down on tabletop until arm bolts are fully inserted into each of the bracket slots, as shown in figure 4. Be sure back leg of table is resting on floor during this step. Tighten all bolts securely.
11. Your product is now assembled and ready to use.


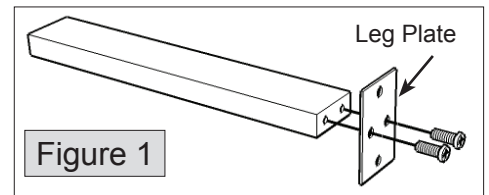


Figure 1

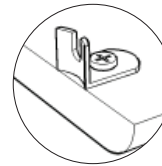

Brackets flush to edge


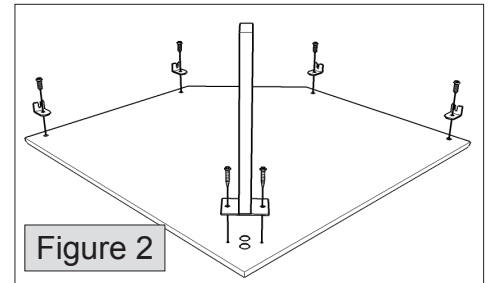


Figure 2

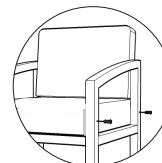

Insert bolts into arms

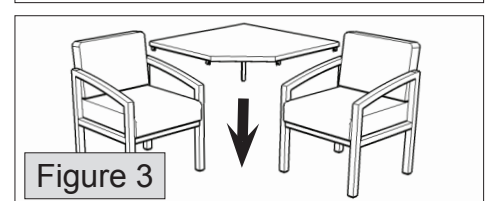


Figure 3

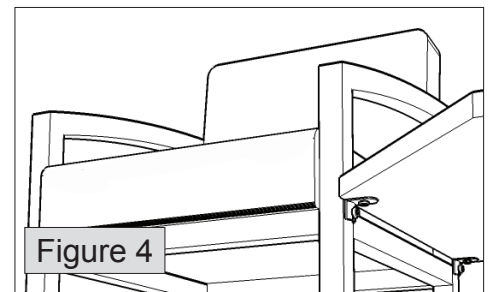
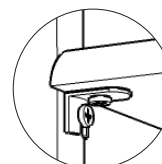


Figure 4

Thank you for purchasing a Lesro product.  
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.  
Visit us on-line at [www.lesro.com](http://www.lesro.com)